

BEFORE USING THE COOKING HOB **Page 12**

SUGGESTIONS FOR ENVIRONMENT PROTECTION **Page 12**

PRECAUTIONS AND GENERAL ADVICE **Page 12**

ENERGY SAVING TIPS **Page 13**

CARE AND MAINTENANCE **Page 13**

TROUBLE-SHOOTING GUIDE **Page 14**

AFTER-SALES SERVICE **Page 14**

INSTALLATION **Page 15**

NATIONAL SAFETY REGULATIONS **Page 18**

BEFORE USING THE COOKING HOB

- **To get full satisfaction of your cooking hob, please read these instructions carefully and keep them for future consultation.**

- Keep the packaging material (plastic bags, polystyrene parts, etc.) out of the reach of children, as they are potentially dangerous.
- Check whether the cooking hob has been damaged during transport.
- **Ensure that the installation and gas/electrical connections are performed by a qualified technician, following the manufacturer's instructions and in compliance with current local safety regulations.**


SUGGESTIONS FOR ENVIRONMENT PROTECTION

1. Packaging

The packaging material is entirely recyclable, and is marked with the recycling symbol ♻, which identifies it as a type of material that must be sent to local waste-disposal centres.

2. Product

The cooking hob is made out of recyclable material. When scrapping it, comply with local waste-disposal regulations. Before disposing of it, cut its power cable off in order to render it inoperative.

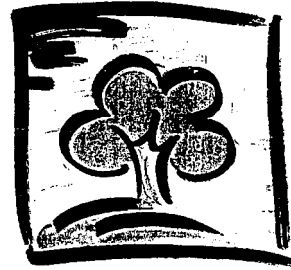

PRECAUTIONS AND GENERAL ADVICE

- Before any cleaning or maintenance operation, disconnect the cooking hob from mains power supply.
- The use of a gas appliance produces heat and humidity in the room. Ensure that the room is well ventilated, or install an extractor hood with exhaust duct.
- In case of prolonged use, additional ventilation may be needed (opening a window or increasing the extraction force of the hood).
- Keep children away from the cooking hob when it is in use.
- After use, ensure that the knobs are in position ● (off), and close the main gas delivery valve or the gas cylinder valve.
- Caution: the lid (where present) might break if overheated. Before closing it, make sure that all the burners are off.
- Warning: The protective rubber feet on the panstand grids represent a choking hazard for young children. After cleaning the panstand grids, please ensure that all the rubber feet are correctly fitted.

Declaration of conformity C E

- This cooking hob is suitable for contact with foodstuffs, and complies with EEC Directive 89/109.
- This cooking hob (class 3) has been designed to be used only for cooking. Any other use (such as heating a room) is improper and dangerous.
- This cooking hob has been designed, constructed and marketed in compliance with:
 - safety requirements of EEC Directive "Gas" 90/396;
 - safety requirements of EEC Directive "Low voltage" 73/23;
 - protection requirements of EEC Directive "EMC" 89/336;
 - requirements of EEC Directive 93/68.

ENERGY SAVING TIPS

- The cooking hob is equipped with burners and/or a hotplate with different diameters. Use pots and pans whose bottom diameter is equal to that of the burners and hotplate, or slightly larger.
- Only use flat-bottomed pots and pans.
- The pots and pans must not overlap the control panel.
- A pressure cooker allows you to save even more energy and time.

Diameter of burner	Diameter of container
Large (9,1 cm)	24 to 26 cm
Medium (6,4 cm)	16 to 22 cm
Small (4,5 cm)	8 to 14 cm
Triple crown (12 cm)	24 to 26 cm
Fish kettle (23 cm x 4,5 cm)	16x35 cm

- If possible, keep the container covered when cooking.
- Cook vegetables, potatoes, etc. with a small amount of water in order to cut down cooking time.



CARE AND MAINTENANCE

Cleaning the cooking hob surface, panstand grids and control panel

- **Before cleaning the cooking hob, disconnect it from mains power supply and wait until it has cooled down.**
- Wipe with a cloth moistened with hot water and soap or diluted liquid detergent.
- Do not use abrasive or corrosive products, chlorine products or steel wool.
- Do not leave acid or alkaline substances, such as vinegar, salt or lemon juice, etc., on the cooking hob.

Stainless steel surface

- Clean with a specific commercial product.

Note: if the cooking hob is used continuously, the high temperatures produced by the flames may alter the colour of the surface near the burners.

Cleaning the burners

1. Raise the cap and remove it.
2. Extract the burner from its housing by pulling it up.
3. Soak the burner and the cap in hot water and liquid detergent. (Do not wash into a dishwasher).
4. Rinse out and dry carefully.
5. Ensure that none of its openings is clogged.
6. Reposition the burner and cap.

Note: to avoid damaging the electric ignition device, do not use it when the burners are not in their housing.



Cleaning the electric hotplate

The electric hotplate must be cleaned when it is lukewarm.

Wipe with a cloth moistened with water and salt, and polish with a cloth moistened with oil.

TROUBLE-SHOOTING GUIDE

1. The burner fails to ignite:

- Is the main gas delivery valve open?
- Has the delivery of the town gas (methane) been suspended?
- Is the gas cylinder (liquid gas) empty?
- Are the openings of the burner clogged?
- Have the cap and burner been positioned correctly after cleaning? (See paragraph "Care and maintenance".)

2. The burner fails to remain lit:

- Repeat the ignition operation, turning the knob to the position with the small flame symbol 🔥.

3. The electric ignition device does not work:

- Is there a power failure?

AFTER-SALES SERVICE

Before you call the After-Sales Service:

1. Check the "Troubleshooting guide" above to see if you can eliminate the trouble yourself.
2. Re-start the cooking hob, to check whether correct operation has been restored.
3. If the malfunction persists, call the After-sales Service.

Give the following information:

- type of malfunction;
- model of cooking hob;
- service number (i.e., the number that follows the word SERVICE on the rating plate under the cooking hob and on the guarantee paper);
- your complete address;
- your telephone number and area code.

If any repairs are required, please contact **an authorised After-Sales Service**, as indicated in the warranty.

In the unlikely event that an operation or repair is carried out by an **unauthorised technician**, always request a certification of the job carried out and insist on the use of **original spare parts**.

Failure to comply with these instructions may compromise the safety and quality of the product.

If any repairs are required, please contact an authorised customer service centre, as indicated in the warranty.

In the unlikely event that an operation or repair is carried out by an unauthorised technician, always request a certification of the job carried out and insist on the use of original spare parts.

Failure to comply with these instructions may compromise the safety and quality of the product.



SERVICE 0000 000 00000



INSTALLATION

Technical information for installer

This cooking hob can be embedded in a worktop 20 to 50 mm thick.

If there is no oven beneath the cooktop (any oven installed must be manufactured by us and equipped with a cooling system), insert a separator panel at a minimum distance of 20 mm from the bottom of the cooktop.

Note: before installation, make sure that the local gas delivery conditions (nature and pressure of gas) are compatible with the settings of the cooking hob, as indicated on the rating plate.

- If a vertical piece of furniture is installed, there must be a gap of at least 100 mm between it and the edge of the cooking hob.
- Before installing the cooking hob, remove the plastic film that protects it, if present. The outer surfaces of the furniture or appliances adjoining the cooking hob must be heat resistant (heat protection "Y", according to standards EN 60335-2-6).

- Installation must comply with current local regulations.
- In the room where the cooking hob is installed, there must be enough air to allow the gas to burn correctly (see relevant table).
- The natural flow of air must take place through an adequate opening, that must be:
 - permanent, made on one of the outside walls of the room, and communicating with the exterior in an area away from sources of pollution;
 - built so as to ensure that its openings, both on the inside and on the outside, cannot be obstructed, intentionally or accidentally;
 - protected by a metal grid or mesh that does not reduce its working section;
 - situated near the floor level and positioned so as not to interfere with the operation of the fume exhaust devices.


Assembly

- Apply the supplied gasket to the cooking hob (unless it has already been fitted), after having cleaned its surface as shown in the relevant figure.

To fasten the cooking hob, use brackets (A) supplied with it.

1. Fit the brackets into the relevant bores and fasten them by means of their screws.
2. Make an opening in the worktop, respecting the dimensions indicated in the enclosed product description sheet.
3. Install the cooking hob in the worktop.

Important: the power supply cable and plug must be suitable for the power absorption of the cooking hob, and the cable must be long enough to permit the upward extraction of the cooking hob.

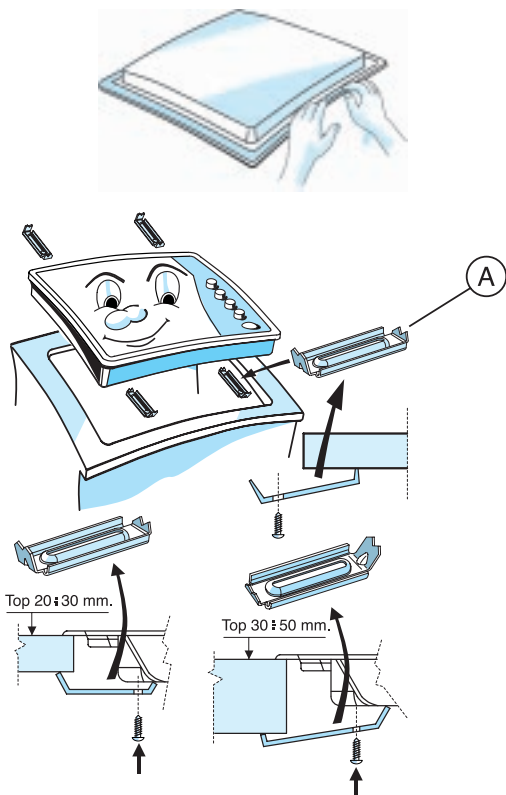


INSTALLATION

Only for GERMANY, SWITZERLAND AND AUSTRIA

A - If the worktop is made out of wood, use the springs provided.

1. Fit the four springs ⑧ into the relative housing under the box.
2. Make an opening in the worktop, respecting the dimensions indicated in the enclosed product description sheet.
3. Install the cooking hob in the worktop.

B - If the worktop is made out of marble or other materials (plastics, ceramics or stone), the cooking hob must be fastened by means of special brackets, to be ordered from the After-Sales Service (code 4819 310 18528).

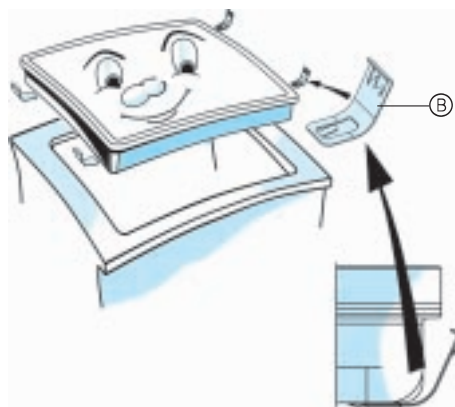

Electrical connection

- The electrical connections must comply with local regulations.
- The data relevant to the voltage and power absorption are indicated on the rating plate.
- The earthing of this appliance is compulsory by law.
The manufacturer cannot be held responsible for injury to persons or animals or damage to property arising from failure to comply with these requirements.
- When the cooking hob is installed, provide a single-pole circuit breaker with a contact breaking distance of at least 3 mm.
- If necessary, the electrical power cable must be replaced exclusively with a power cable having identical characteristics to the original supplied by the manufacturer. This operation must be performed by Customer Service or a qualified electrician.


Connection to gas supply

The gas supply system must comply with local regulations (see paragraph "National safety regulations").

The connection of the cooking hob to the gas pipe network or gas cylinder must be made by means of a rigid copper or steel pipe with fittings complying with local regulations, or by means of a continuous-surface stainless steel hose complying with local regulations. Interpose gasket ⑨ in the elbow connection.

The maximum length of the hose is 2 m.

Important: if a stainless steel hose is used, it must be installed so as not to touch any movable part of the furniture.

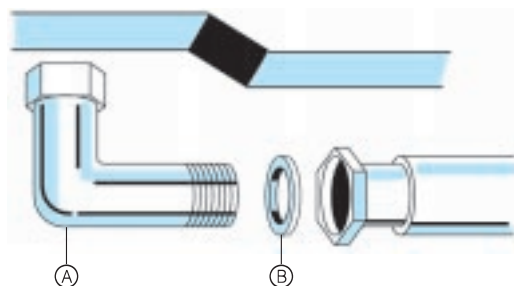

It must pass through an area where there are no obstructions and where it is possible to inspect it on all its length.

INSTALLATION

Adjustment to different types of gas

If a different type of gas from the one indicated in the plate is used, the cooking hob must be adapted to it.



1. The gas nozzles must be changed by After-Sales Service or a qualified technician. Nozzles not supplied with the appliance must be ordered from After-Sales Service.
2. Connect the cooking hob to the gas shut-off valve by means of a pipe suitable for the type of gas used, in compliance with current local regulations.
3. Adjust the minimum setting of the taps.

Note: when liquid petroleum gas is used (G 30/ G 31), the minimum gas setting screws must be tightened as far as they will go.

Replacing the injectors (see table in enclosed product description sheet)

1. Remove grids (A) .
2. Extract burners (B) .
3. Using a socket spanner of the appropriate size, (C), unscrew the injector to be replaced.
4. Replace it with the injector suitable for the new type of gas.
5. Re-assemble the injector in (D) .
6. For models equipped with a triple crown burner, proceed as shown in figure.
 - Remove the two screws (F) followed by the cap (G) then replace both injectors (D) as previously described.


Replace the cap (G), ensuring the seal is properly positioned before attempting to use the cooktop.
7. Before installing the cooktop, remember to affix the gas calibration plate supplied with the injectors in such a way that it covers the existing information relating to gas calibration.

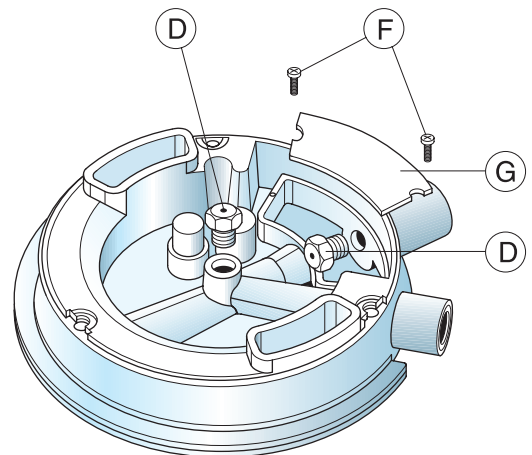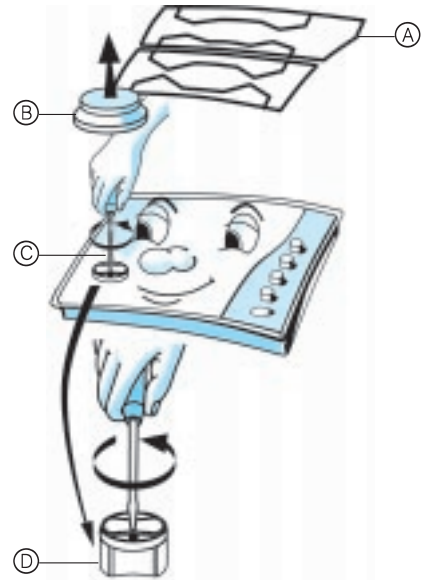

Adjusting minimum gas setting of taps

To ensure that the minimum setting is correctly adjusted, remove knob (E) and proceed as follows:

- tighten (-) to reduce the height of the flame;
- loosen (+) to increase the height of the flame.

The adjustment must be performed with the tap in minimum gas setting position (small flame) .

ITALY

Ventilation of room

When the appliance is not equipped with safety devices on the burners (thermocouples), the air vents must be increased by 100%, and must be at least 200 cm², in compliance with the departmental decree of 21 April 1993.

Gas supply system

Before connecting the appliance, make sure that the gas supply system complies with standards UNI 7129 and UNI 7131.

Connection to gas supply

The connection to the gas pipe network or gas cylinder must be made with a rigid copper or steel pipe with fittings complying with standards UNI 7129, or with a continuous-surface stainless steel hose complying with standards UNI 9891. The maximum length of the hose is 2 m.

FRANCE

The installation and maintenance of the appliance must be carried out by a qualified skilled worker in accordance with the regulations and trade rules in force, and in particular:

-Order of 2 August 1977

Technical and Safety Rules applicable to fuel gas and liquefied hydrocarbon installations located within residential buildings and their outbuildings.

Standard DTU P 45 – 204 – Gas installation (formerly DTU no. 61-1 – Gas installations – April 1982 + supplement no. 1 of July 1984)

-Departmental Health Regulations

For appliances connected to the electricity network:

-Standard NF C 15-100 – Low-voltage electrical installations – Rules.

U.K.

Provision for ventilation

The room containing this appliance should have an air supply in accordance with the current B.S. 5440: Part 2.

All rooms require a permanent vent in addition to the openable window. If there are other fuel burning appliances in the same room, B.S. 5440: Part 2 should be consulted to determine the requisite air vent requirements.

If the appliance is installed in a cellar or basement, it is advisable to provide an air vent of effective area 65 cm, irrespective of the room volume.

Gas Safety Regulations

It is law that all gas appliances are installed by competent persons in accordance with the current gas safety regulations. Failure to install appliances correctly could lead to prosecution. It is in your own interest, and that of safety, to ensure that the law is complied with.

The hob should be installed in accordance with the Gas Safety (Installation and Use) Regulations, the Building Regulations issued by the Department of the Environment and the Building Standards (Scotland) (Consolidation) Regulations issued by the Scottish Development Department. In the U.K. CORGI registered installers work to safe standards of practice.

BELGIUM

The appliance is supplied with a 1/2" cone threaded end to be connected to the gas supply (according to ISO regulations 7/1 RP 1/2). The connection must be effected in accordance with Standard NBN D 51-003 with rigid piping or in accordance with specifications sheet A.R.G.B./03 with flexible tubing. The appliance must be installed with an AGB-approved stop valve.